

Time Commander TZ

Thank you for purchasing the Time Commander TZ Touchscreen IR Remote Control. This device allows easy configuration of BRG time zone displays, including configuring time display rules, digital labels, moving message text, time formats and more.

The Time Commander can be operated from either the AC power adapter or the internal rechargeable NiMH battery. No Lithium batteries are used in this device. The internal battery provides about two hours of run time. The batteries are charged any time the device is connected to external power.

Help

There are two help documents available. On-screen help for Time Commander appears as pop-up screens when command buttons are pressed. A help screen appears right after power up and provides three steps to get started.

Another source of help is the user manual for the clock. This manual covers all clock models. No single clock includes all of the features provided in the user manual. The user manuals can be downloaded from: http://www.brgprecision.com/pdffiles/BRG Mega Tiger Manual.pdf

Another useful manual for time zone displays is: http://www.brgprecision.com/support/BRG TimeZone Guide V3.pdf

Another source of help is our technical support staff at: 316-788-2000 or techsupport@brgproducts.com

Getting Started

To turn on the Time Command, switch the power switch located on the back of the device to the On position. When using the Time Commander, point the LED emitter located on the back of the device toward the clock to be controlled. If multiple clocks in close proximity are to be controlled, they can be configured with an address so each clock can be individually controlled.

Various navigation keys are available for editing commands. The "Save All" button instructs the clock to save all changes to non-volatile memory.

The "More Config Options" button toggles between the two configuration screens.

The buttons on the Time Commander covers only a sub-set of all available clock commands. To make changes that don't have a dedicated button, go to the second configuration screen and select the "Change Any Mode" button. Reference the clock user manual for specific commands.

On-screen help is available for most command buttons. It provides valuable step-by-step instructions on how execute the selected command.